



17UC5-526-ARA-AA  
First Edition  
Uconnect 5.0  
Printed in the USA



UCONNECT 5.0

---

# OWNER'S MANUAL SUPPLEMENT

©2016 FCA US LLC. All Rights Reserved.

Chrysler, Dodge, Jeep, Ram, Mopar and Uconnect are trademarks of FCA US LLC.  
FIAT is a registered trademark of FCA Group Marketing S.p.A.,  
used under license by FCA US LLC.

# TABLE OF CONTENTS

1	SAFETY GUIDELINES .....	3
2	IDENTIFYING YOUR RADIO .....	7
3	RADIO MODE .....	11
4	MEDIA MODE .....	15
5	UCONNECT PHONE .....	19
6	UCONNECT 5.0/5.0 NAV VOICE RECOGNITION QUICK TIPS .....	23
7	UCONNECT SETTINGS .....	29
8	MORE BUTTON .....	31



## SAFETY GUIDELINES

• SAFETY GUIDELINES . . . . .	4
• Safe Usage Of The Uconnect System. . . . .	4
• Touchscreen . . . . .	4
• Disc Drive . . . . .	4
• Safety Information . . . . .	5

## SAFETY GUIDELINES

### WARNING!

**ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**

Ensure that all persons read this manual carefully before using the system. It contains instructions on how to use the system in a safe and effective manner.

**Do NOT attach any object to the touchscreen, doing so can result in damage to the touchscreen.**

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- Glance at screen only when safe to do so. If prolonged viewing of the screen is required, park in a safe location and set the parking brake

- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Ensure the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

### Safe Usage Of The Uconnect System

- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Your system is a sophisticated electronic device. Do not let young children use your system.
- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on your system.
- Keep drinks, rain and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

**NOTE:** Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion.

### Touchscreen

- Do not press the touchscreen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.
- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

### Disc Drive

- Do not insert any damaged, warped, scratched or dirty Discs into the Disc Player.
- Discs that have been modified with an adhesive label should not be used in the Disc Player.
- Do not insert more than one Disc at a time into the drive slot.

## **Safety Information**

### **Exposure To Radio Frequency Radiation**

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.



## IDENTIFYING YOUR RADIO

• IDENTIFYING YOUR RADIO . . . . .	.8
• Uconnect 5.0 System With Integrated Center Stack . . . . .	.8
• Uconnect 5.0 System Without Integrated Center Stack . . . . .	.9
• CYBERSECURITY . . . . .	.9

## IDENTIFYING YOUR RADIO

Uconnect 5.0 w/Integrated Center Stack




Uconnect 5.0 w/o Integrated Center Stack



Key Features:

- 5" Touchscreen
- Three buttons on either side of the display
- Hands-free/Bluetooth

## Uconnect 5.0 System With Integrated Center Stack

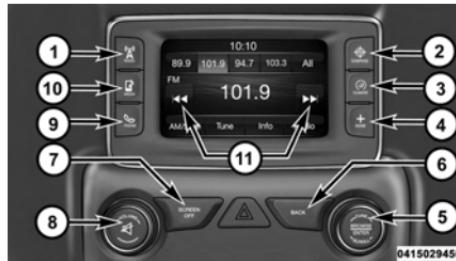

### 1 — RADIO

Push the RADIO button on the faceplate to enter the Radio Mode. The different tuner modes; FM/AM/SW/LW/MW/DAB/DAB+ – If Equipped can be selected by pressing the corresponding buttons on the touchscreen in the Radio Mode.

### 2 — COMPASS

Push the COMPASS button on the faceplate to display the current direction of the vehicle.

### 3 — CLIMATE

Push the CLIMATE button on the faceplate to access the Climate controls.

### 4 — MORE

Push the MORE button on the faceplate to access additional options.

### 5 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/ SCROLL rotary knob to scroll through a list or tune a radio station.

### 6 — BACK

Push the BACK button to return to a previous menu or screen.

### 7 — SCREEN OFF

Push the SCREEN OFF button on the faceplate to turn the touchscreen OFF. To turn the screen back ON, just press the touchscreen.

### 8 — VOLUME & MUTE

Rotate the rotary knob to adjust the Volume. Push the Mute button to mute the system.

### 9 — PHONE

Push the Phone button to access the Uconnect Phone feature.

### 10 — MEDIA

Push the Media button on the faceplate to access media sources such as: Disc, USB Device, SD, AUX and Bluetooth (If Equipped).

### 11 — SEEK UP/SEEK DOWN

Press the "Seek Up" ► and the "Seek Down" ◀ buttons on the touchscreen to seek through radio stations in FM/AM/SW/LW/MW/DAB/ DAB+ bands. Seek through tracks on CD (if equipped).

## Uconnect 5.0 System Without Integrated Center Stack



### 1 — RADIO

Push the RADIO button on the faceplate to enter Radio Mode. The different tuner modes; FM/AM/SW/LW/MW/DAB/DAB+ (if equipped), can be selected by pressing the corresponding buttons on the touchscreen in Radio Mode.

### 2 — COMPASS

Push the COMPASS button on the faceplate to display the current direction of the vehicle.

### 3 — SETTINGS

Push the SETTINGS button on the faceplate to display the customer programmable features.

### 4 — MORE

Push the MORE button on the faceplate to access additional options.

### 5 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

### 6 — BACK

Push the BACK button to return to a previous menu or screen.

### 7 — SCREEN OFF

Push the SCREEN OFF button to turn the touchscreen OFF. To turn the touchscreen back ON, just press the screen.

### 8 — VOLUME/MUTE

Rotate the rotary knob to adjust the Volume. Push the VOLUME/MUTE button to mute the system.

### 9 — PHONE

Push the PHONE button on the faceplate to access the Uconnect Phone feature.

### 10 — MEDIA

Pushing the MEDIA button on the faceplate will allow you to switch to Media mode: CD (if equipped), USB/iPOD, AUX, SD Card (if equipped) and Bluetooth.

## CYBERSECURITY

Your vehicle may be a connected vehicle and may be equipped with both wired and wireless networks. These networks allow your vehicle to

send and receive information. This information allows systems and features in your vehicle to function properly.

Your vehicle may be equipped with certain security features to reduce the risk of unauthorized and unlawful access to vehicle systems and wireless communications. Vehicle software technology continues to evolve over time and FCA US LLC, working with its suppliers, evaluates and takes appropriate steps as needed. Similar to a computer or other devices, your vehicle may require software updates to improve the usability and performance of your systems or to reduce the potential risk of unauthorized and unlawful access to your vehicle systems.

The risk of unauthorized and unlawful access to your vehicle systems may still exist, even if the most recent version of vehicle software (such as Uconnect software) is installed.

### WARNING!

- It is not possible to know or to predict all of the possible outcomes if your vehicle's systems are breached. It may be possible that vehicle systems, including safety related systems, could be impaired or a loss of vehicle control could occur that may result in an accident involving serious injury or death.

(Continued)

**WARNING! (Continued)**

- ONLY insert media (e.g., USB, SD card, or CD) into your vehicle if it came from a trusted source. Media of unknown origin could possibly contain malicious software, and if installed in your vehicle, it may increase the possibility for vehicle systems to be breached.
- As always, if you experience unusual vehicle behavior, take your vehicle to your nearest authorized dealer immediately.

**NOTE:**

- FCA or your dealer may contact you directly regarding software updates.
- To help further improve vehicle security and minimize the potential risk of a security breach, vehicle owners should:
  - Routinely check [www.driveuconnect.com/software-update](http://www.driveuconnect.com/software-update) to learn about available Uconnect software updates.
  - Only connect and use trusted media devices (e.g. personal mobile phones, USBs, CDs).

Privacy of any wireless and wired communications cannot be assured. Third parties may unlawfully intercept information and private communications without your consent. For further information, refer to "Onboard Diagnostic System (OBD II) Cybersecurity" in your Owner's Manual.

## RADIO MODE

• RADIO MODE . . . . .	.12
• Volume/Mute. . . . .	.12
• Enter/Browse & Tune/Scroll Control. . . . .	.12
• Seek Functions . . . . .	.12
• Setting Presets . . . . .	.12
• Audio . . . . .	.12
• Clock Setting . . . . .	.13

## RADIO MODE

The radio is equipped with the following modes:

- FM
- AM (SW/LW/MW – If Equipped)
- DAB/DAB+ – If Equipped

Push the RADIO button on the faceplate, to enter the Radio Mode. The different tuner modes; FM/AM/SW/LW/MW/DAB/DAB+ – If Equipped, can then be selected by pressing the corresponding buttons on the touchscreen in the Radio mode.

### Volume/Mute

Rotate the VOLUME/MUTE rotary knob to adjust the Volume. When the audio system is turned on, the sound will be set at the same volume level as last played.

Push the VOLUME/MUTE button to mute the system. Push the VOLUME/MUTE button again to unmute the system.

### Enter/Browse & Tune/Scroll Control

Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

## Seek Functions

### Seek Up▶▶

Press and release the “Seek Up” ▶▶ button on the touchscreen to tune the radio to the next listenable station or channel.

During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

### Fast Seek Up▶▶

Press and hold the “Seek Up” ▶▶ button on the touchscreen to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

### Seek Down◀◀

Press and release the “Seek Down” ◀◀ button on the touchscreen to tune the radio to the next listenable station or channel.

During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

### Fast Seek Down◀◀

Press and hold the “Seek Down” ◀◀ button on the touchscreen to advance the radio through the available stations or channel at a faster rate,

the radio stops at the next available station or channel when the button on the touchscreen is released.

## Setting Presets

The Presets are available for all Radio Modes, and are activated by pressing any of the four “Preset” buttons on the touchscreen, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered button on the touchscreen for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. Four presets are visible at the top of the radio screen.

Pressing the “All” button on the touchscreen will display all of the preset stations for that mode.

## Audio

1. Push the SETTINGS button on the right side of the radio faceplate. If the settings button is not present, push the MORE button on the faceplate then the “Settings” button on the touchscreen.

2. Scroll down and press the “Audio” button on the touchscreen to open the Audio menu.

3. The Audio Menu shows the following options for you to customize your audio settings:

- **Equalizer** — Press the “Equalizer” button on the touchscreen to adjust the Bass,

Mid and Treble. Use the “+” or “-” buttons on the touchscreen to adjust the equalizer to your desired settings. Press the “Back Arrow” button on the touchscreen when done.

- **Balance/Fade** — Press the “Balance/Fade” button on the touchscreen to adjust the sound from the speakers. Use the “arrow” button on the touchscreen to adjust the sound level from the front and rear or right and left side speakers. Press the Center “C” button on the touchscreen to reset the balance and fade to the factory setting. Press the “Back Arrow” button on the touchscreen when done.

- **Speed Adjustable** — Press the “Speed Adjusted Volume” button on the touchscreen to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed. Press the “Back Arrow” button on the touchscreen when done.

- **Loudness** — Press the “Loudness” button on the touchscreen to select the Loudness feature. When this feature is activated it improves sound quality at lower volumes.

## Clock Setting


1. If a SETTINGS button on the right side of faceplate exists, push this button. If not, push the MORE button on the faceplate then the “Settings” button on the touchscreen.
2. Select the “Clock and Date” button on the touchscreen.
3. Next, select “Set Time” to change the time.
4. Select “Set Date” to change the date.
5. To set the time, select the “Seek Up” ►► or “Seek Down” ◀◀ arrows as appropriate. Select “12 hrs vs 24 hrs”, “AM” or “PM” or select the “Time Zones” (if equipped).
6. Select “Done” when complete.



## MEDIA MODE

• MEDIA MODE OPERATION . . . . .	.16
• Common Media Functions . . . . .	.16
• Disc Mode — If Equipped . . . . .	.17
• USB/iPod Mode . . . . .	.17
• AUX Mode . . . . .	.17
• Bluetooth Mode . . . . .	.18
• Uconnect LIVE . . . . .	.18

## MEDIA MODE OPERATION

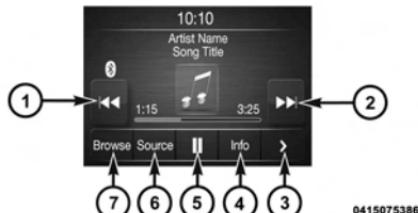

- |                          |                |
|--------------------------|----------------|
| 1 — SEEK Down◀◀          | 4 — Info       |
| 2 — SEEK Up▶▶            | 5 — Pause/Play |
| 3 — Additional Functions | 6 — Source     |
|                          | 7 — Browse     |

Media Mode is entered by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the "Source" button on the touchscreen and the desired mode button on the touchscreen. Disc (if equipped), USB, SD Card (if equipped), AUX and Bluetooth (if equipped), are the Media sources available. When avail

able, you can select the "Browse" button on the touchscreen to be given these options:

- Now Playing
- Artists
- Albums
- Genres
- Songs
- Playlists
- Folders

You can press the "Source," "Pause/Play" or the "Info" button on the touchscreen for artist information on the current song playing.

### Common Media Functions

#### Seek Up ▶▶/Seek Down◀◀

Press and release the "Right Arrow" ▶▶ button on the touchscreen for the next selection. Press and release the "Left Arrow" ◀◀ button on the touchscreen to return to the beginning of the current selection, or return to the beginning of the previous selection if the Disc is within the first second of the current selection.

#### Fast Seek Up▶▶

Press and hold the "Right Arrow" ▶▶ button on the touchscreen and the desired mode will begin to fast forward through the current track until the button on the touchscreen is released.

#### Fast Seek Down◀◀

Press and hold the "Left Arrow" ◀◀ button on the touchscreen and the desired mode will begin to rewind through the current track until the button on the touchscreen is released.

#### Source

Press the "Source" button on the touchscreen to select the desired audio source: Disc (if equipped), USB, SD (if equipped), AUX and Bluetooth (if equipped). This screen will time out after a few seconds and return to the main radio screen if no selection is made.

#### Info

Press the "Info" button on the touchscreen to display the current track information. Press the "X" button on the touchscreen to cancel this feature.

#### Shuffle

Press the "Shuffle" button on the touchscreen to play the selections on the USB/iPod device in random order to provide an interesting change of pace. Press the "Shuffle" button on the touchscreen a second time to turn this feature off.

#### Audio

Refer to "Radio Mode Operation" for adjusting the audio settings.

## **Repeat**

Press the “Repeat” button on the touchscreen to repeat the song selection. To cancel repeat, press the “Repeat” button on the touchscreen a second time.

## **Disc Mode — If Equipped**

Your vehicle may have a remote Disc player located in the center console storage bin.

Disc Mode is entered by either inserting a CD/Disc or by pushing the MEDIA button on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “Disc.”

### **Inserting Compact Disc**

Gently insert one Disc into the Disc player with the Disc label following the illustration indicated on the player. The Disc will automatically be pulled into the Disc player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 inch (2.5 cm), a Disc may already be loaded and must be ejected before a new Disc can be loaded.

If you insert a Disc with the ignition ON and the radio ON, the unit will switch to Disc mode and begin to play when you insert the Disc. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

## **Browse**

Press the “Browse” button on the touchscreen to scroll through and select a desired track on the Disc. Press the “Exit” button on the touchscreen if you wish to cancel the browse function.

### **Eject Button — Ejecting a Disc**

Push the EJECT button to eject the Disc. If you have ejected a Disc and have not removed it within 10 seconds, it will be reloaded. If the Disc is not removed, the radio will reinsert the Disc but will not play it.

A Disc can be ejected with the radio and ignition OFF.

## **USB/iPod Mode**

USB/iPod Mode is entered by either inserting a USB Jump Drive or iPod cable into the USB port, or by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “USB/iPod.”

### **Inserting USB/iPod Device**

Gently insert the USB/iPod device into the USB Port. If you insert a USB/iPod device with the ignition ON, the unit will switch to USB/iPod mode and begin to play when you insert the device. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

## **Browse**

Press the “Browse” button on the touchscreen to select Artist, Albums, Genres, Songs, Playlists or Folders from the USB/iPod device. Once the desired selection is made you can chose from the available media by pressing the button on the touchscreen. Press the “Exit” button on the touchscreen if you wish to cancel the browse function.

## **AUX Mode**

AUX Mode is entered by inserting a AUX device using a stereo cable with a 3.5 mm audio jack into the AUX port, or by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “AUX.”

### **Inserting Auxiliary Device**

Gently insert the Auxiliary device cable into the AUX Port. If you insert a Auxiliary device with the ignition ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

### **Controlling The Auxiliary Device**

The control of the Auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the VOLUME/MUTE rotary knob, or with the volume of the attached device.

The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

## **Bluetooth Mode**

Bluetooth Streaming Audio (BTSA) or Bluetooth Mode is entered by pairing a Bluetooth device containing music to the Uconnect system.

Before proceeding, the Bluetooth device must be paired with the Uconnect Phone to communicate with the Uconnect system.

See the “Pairing Procedure” in this manual for further details.

Once the Bluetooth device is paired to the Uconnect system, push the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “Bluetooth.”

**NOTE:** For mobile phone compatibility and pairing instructions, please visit [UconnectPhone.com](http://UconnectPhone.com).

## **Uconnect LIVE**

The Uconnect LIVE app is available in the Apple Store or the Google Play Store. A whole range of apps can be viewed and controlled through the touchscreen of the Uconnect system. The apps have been designed to ensure that the driver's concentration remains focused on driving. For further information refer to [www.driveuconnect.eu/en/features/uconnectlive](http://www.driveuconnect.eu/en/features/uconnectlive).

## UCONNECT PHONE

• UCONNECT PHONE . . . . .	20
• Pairing A Phone. . . . .	20
• Phonebook Download — Phonebook Transfer From Mobile Phone . . . . .	20
• Making A Phone Call. . . . .	21
• Receiving A Call — Accept (And End). . . . .	21
• Changing The Volume . . . . .	21

## WARNING!

**ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.**

## UCONNECT PHONE

### Pairing A Phone

To use the Uconnect Phone feature, you must first pair your Bluetooth phone with the Uconnect system. Refer to UconnectPhone.com for pairing procedure unique to your phone. Even if your phone is not listed, perform the pairing procedure.

#### Start Pairing Procedure

1. Activate the Bluetooth on your mobile phone.
2. Push the PHONE button on the faceplate.

**NOTE:** If no phone is paired with the system, the display shows a dedicated screen.

3. Press the "Yes" button on the touchscreen to start the pairing procedure. Search for the Uconnect device on the mobile phone (if No is selected, the Phone main screen is displayed).

4. When prompted by the mobile phone, use its keyboard to enter the PIN code shown on the system display or confirm on the mobile phone the PIN displayed.

**NOTE:** During the pairing stage a screen is displayed indicating the progress of the operation.

- From the Phone screen you can always pair a mobile phone. Press the "Settings" button then press the "Add Device" button on the touchscreen and proceed as described above.
- If the pairing procedure is completed successfully, a screen is displayed. Press "Yes" to the question to pair the mobile phone as favorite (the mobile phone will have priority on all other mobile phones that will be paired later on). If no other devices are paired, the system will consider the first associated device as favorite.

**NOTE:** The priority is determined according to the order of connection for mobile phones which are not set as favorite. The last phone connected will have the highest priority.

### Phonebook Download — Phonebook Transfer From Mobile Phone

If equipped and specifically supported by your phone, Uconnect Phone will ask you if you want to download names (text names) and number entries from your mobile phone's phonebook. Specific Bluetooth Phones with Phone Book Access Profile may support this feature. See UconnectPhone.com for supported phones.

Download and update, if supported, begins as soon as the Bluetooth wireless phone connection is made to the Uconnect Phone, for example, after you start the vehicle.

#### NOTE:

- A maximum of 2,000 entries per phone will be downloaded and updated every time a phone is connected to the Uconnect Phone.
- Depending on the maximum number of entries downloaded, there may be a short delay before the latest downloaded names can be used. Until then, if available, the previously downloaded phonebook is available for use.
- Only the phonebook of the currently connected mobile phone is accessible.

- This downloaded phonebook cannot be edited or deleted on the Uconnect Phone. These can only be edited on the mobile phone. The changes are transferred and updated to Uconnect Phone on the next phone connection.

### **Making A Phone Call**

1. Push the PHONE button on the steering wheel.
2. After the BEEP, say "dial" (or "call" a full name or phone number).

### **Receiving A Call — Accept (And End)**

1. When an incoming call rings or is announced on Uconnect, push the PHONE button.
2. To end a call, push the PHONE button.

### **Changing The Volume**

1. Start a dialogue by pushing the PHONE button on the faceplate, then adjust the volume during a normal call.
2. Use the radio ON/VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect system is speaking. Please note the volume setting for Uconnect phone is different than the audio system volume setting.



## UCONNECT 5.0/5.0 NAV VOICE RECOGNITION QUICK TIPS

• UCONNECT VOICE RECOGNITION . . . . .	24
• Introducing Uconnect . . . . .	24
• Get Started . . . . .	24
• Basic Voice Commands . . . . .	25
• Radio . . . . .	25
• Media . . . . .	26
• Phone . . . . .	26
• Voice Text Reply . . . . .	27
• Additional Information . . . . .	27

# UCONNECT VOICE RECOGNITION

## WARNING!

**ALWAYS** drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

## Introducing Uconnect

Start using Uconnect Voice Recognition with these helpful quick tips. It provides the key Voice Commands and tips you need to know to control your Uconnect 5.0 system.

### Key Features:

- 5" touchscreen
- Three buttons on either side of the display



## Get Started

1. Visit UconnectPhone.com to check mobile device and feature compatibility and to find phone pairing instructions.
2. Reduce background noise. Wind and passenger conversations are examples of noise that may impact recognition.
3. Speak clearly at a normal pace and volume while facing straight ahead. The microphone is positioned on the rearview mirror and aimed at the driver.

4. Each time you give a Voice Command, you must first push either the VR or PHONE button, wait until **after** the beep, then say your Voice Command.


5. You can interrupt the help message or system prompts by pushing the VR or PHONE button and saying a Voice Command from current category.

All you need to control your Uconnect system with your voice are the buttons on your steering wheel.



1 — Push To Begin Radio Or Media Functions

2 — Push To Initiate, Answer/End A Phone Call, Send Or Receive A Text

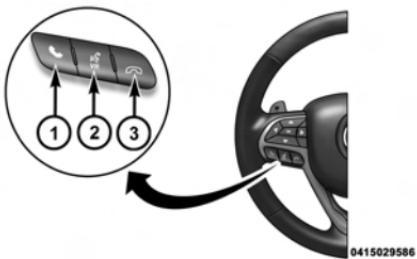

- 0415029586
- 1 — Push To Initiate Or To Answer A Phone Call, Send Or Receive A Text
  - 2 — Push To Begin Radio Or Media Functions
  - 3 — Push To End Call


## Basic Voice Commands

The basic Voice Commands below can be given at any point while using your Uconnect system.

Push the VR button  $\text{VR}$ . After the beep, say...

- **Cancel** to stop a current voice session
- **Help** to hear a list of suggested Voice Commands
- **Repeat** to listen to the system prompts again

Notice the visual cues that inform you of your voice recognition system's status. Cues appear on the touchscreen.

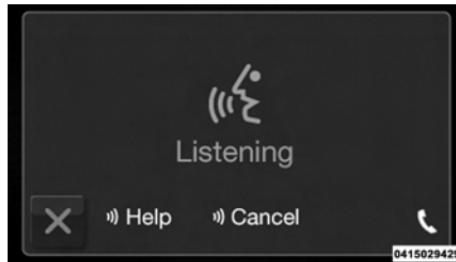

## Radio

Use your voice to quickly get to the AM or FM radio stations.

Push the VR button  $\text{VR}$ . After the beep, say...

- **Tune to** ninety-five-point-five FM
- **Tune to Satellite Hits 1**

**TIP:** At any time, if you are not sure of what to say or want to learn a Voice Command, push the VR button  $\text{VR}$  and say "**Help**." The system will provide you with a list of commands.




## Media

Uconnect offers connections via USB, SD, Bluetooth and Auxiliary ports (If Equipped). Voice operation is only available for connected USB and iPod devices. (Remote CD player optional and not available on all vehicles.)

Push the VR button  . After the beep, say one of the following commands and follow the prompts to switch your media source or choose an artist.

- **Change source to Bluetooth**
- **Change source to iPod**
- **Change source to USB**
- **Play artist Beethoven; Play album Greatest Hits; Play song Moonlight Sonata; Play genre Classical**

**TIP:** Press the “Browse” button on the touchscreen to see all of the music on your iPod or USB device. Your Voice Command must match **exactly** how the artist, album, song and genre information is displayed.

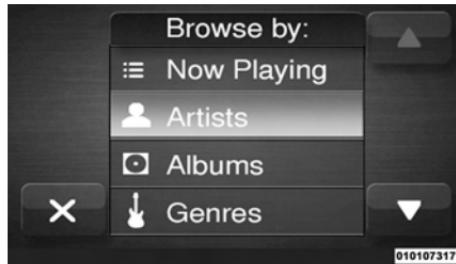

## Phone

Making and answering hands-free phone calls is easy with Uconnect. When the Phonebook button is illuminated on your touchscreen, your system is ready. Check UconnectPhone.com for mobile phone compatibility and pairing instructions.

Push the PHONE button  . After the beep, say one of the following commands:

- **Call John Smith**
- **Dial 123-456-7890** and follow the system prompts
- **Redial** (call previous outgoing phone number)
- **Call back** (call previous incoming phone number)

**TIP:** When providing a Voice Command, push the PHONE button  and say “**Call**,” then pronounce the name **exactly** as it appears in your phone book. When a contact has multiple phone numbers, you can say “**Call John Smith work**.”



## Voice Text Reply

Uconnect will announce **incoming** text messages. Push the PHONE button  and say **Listen**. (Must have compatible mobile phone paired to Uconnect system.)

1. Once an incoming text message is read to you, push the PHONE button  . After the beep, say... **“Reply”**
2. Listen to the Uconnect prompts. After the beep, repeat one of the pre-defined messages and follow the system prompts.

PRE-DEFINED VOICE TEXT REPLY RESPONSES		
Yes.	Stuck in traffic.	See you later.
No.	Start without me.	I'll be late.
Okay.	Where are you?	I will be <number> minutes late.
Call me.	Are you there yet?	See you in <number> of minutes.
I'll call you later.	I need directions.	
I'm on my way.	Can't talk right now.	Thanks.
I'm lost.		

**TIP:** Your mobile phone must have the full implementation of the **Message Access Profile (MAP)** to take advantage of this feature. For details about MAP, visit UconnectPhone.com. Apple iPhone iOS6 or later supports reading **incoming** text messages only.

## Additional Information

© 2016 FCA US LLC. All rights reserved. Mopar and Uconnect are registered trademarks and Mopar Owner Connect is a trademark of FCA US LLC. Android is a trademark of Google Inc.

For Uconnect system support, visit DriveUconnect.com.



## UCONNECT SETTINGS

- SETTINGS MAIN MENU . . . . . 30

## **SETTINGS MAIN MENU**

Push the SETTINGS button on your faceplate, if one exists, to display the Settings Main Menu. If not, push the MORE button on the faceplate then the “Settings” button on your touchscreen. The Settings Main Menu may contain the following options:

- Display
- Units
- Voice
- Clock & Date
- Safety/Assistance
- Brakes
- Lights
- Doors & Locks
- Auto Comfort Systems — If Equipped
- Engine Off Options
- Suspension — If Equipped
- Trailer Brake
- Compass Setting — If Equipped
- Audio
- Phone/Bluetooth
- Radio Setup
- Restore Settings
- Clear Personal Data

Refer to “Uconnect Settings” in the Owner’s Manual for further information.

## MORE BUTTON

- MORE MAIN MENU ..... 32

## **MORE MAIN MENU**

Push the More button on the faceplate to display the More Main Menu. The More Main Menu contains the following options:

- Time — Refer to the Uconnect 5.0 “Radio Mode” section in this manual for details.

## **قائمة MORE (المزيد) الأساسية**

اضغط على زر More (المزيد) بالواجهة لعرض قائمة More (المزيد) الأساسية. تحتوي قائمة More (المزيد) الأساسية على الخيارات التالية:

- الوقت — راجع قسم "وضع الراديو" بنظام Uconnect 5.0 بهذا الدليل للاطلاع على التفاصيل.

- ٣٢ ..... زر MORE (المزيد)
- قائمة MORE (المزيد) الأساسية ..

## قائمة SETTINGS (الإعدادات) الأساسية

- Compass Setting (إعداد البوصلة) - إذا كانت السيارة مزودة بذلك
  - Audio (الصوت)
  - Phone/Bluetooth (الهاتف/البلوتوث)
  - Radio Setup (إعداد الراديو)
  - Restore Settings (استعادة الإعدادات)
  - Clear Personal Data (مسح البيانات الشخصية)
- راجع "إعدادات نظام Uconnect" في دليل المالك للحصول على مزيد من المعلومات.

اضغط على زر SETTINGS (الإعدادات) الموجود على الواجهة، في حالة وجود واحدة، لعرض قائمة Settings (الإعدادات) الأساسية. إذا لم يكن موجوداً، فاضغط على زر "Settings" (المزيد) بالواجهة، ثم على زر "MORE" (الإعدادات) على شاشة اللمس. قد تحتوي القائمة الرئيسية للإعدادات على الخيارات التالية:

- Display (شاشة العرض)
- Units (الوحدات)
- Voice (الصوت)
- Clock & Date (الساعة والتاريخ)
- Safety/Assistance (الأمان/المساعدة)
- Brakes (الفرامل)
- Lights (المصابيح)
- Doors & Locks (الأبواب والأقفال)
- Auto Comfort Systems (أنظمة الراحة التقنية) - إذا كانت السيارة مزودة بذلك
- Engine Off Options (خيارات إيقاف تشغيل المحرك)
- Suspension (التعليق) - إذا كانت السيارة مزودة بذلك
- Trailer Brake (فرامل المقاطورة)

## إعدادات نظام UCONNECT

٣٠ ..... قائمة SETTINGS (الإعدادات) الأساسية .. .



## معلومات إضافية

حقوق النشر © محفوظة لصالح شركة FCA US LLC. جميع الحقوق محفوظة. تُعد Mopar Uconnect علامات تجارية مسجلة، كما أن FCA US هي علامة تجارية لشركة Owner Connect LLC. Google Inc. Android علامة تجارية لصالح Google LLC. Android للحصول على دعم نظام Uconnect، تفضل بزيارة DriveUconnect.com

الردود مسبقة التحديد على النص الصوتي		
See you in <number> of minutes. (سوف أراك في غضون من > رقم < الدقائق).	I need directions. (أحتاج إلى التوجيهات).	I'll call you later. (سأتصل بك في وقت لاحق).
Thanks. (شكراً).	Can't talk right now. (لا يمكنني التحدث في وقت لاحق).	"I'm on my way." (أنا في طريقى). "I'm lost." (أنا ضائعة).

تمرين: يجب أن يكون لدى هاتفك المحمول التطبيق الكامل لخاصية **MAP** (خاصية الوصول إلى الرسائل) للاستفادة من هذه الميزة. للحصول على تفاصيل حول خاصية MAP، تفضل بزيارة UconnectPhone.com. يدعم نظام النصية الواردة فقط.

الردود مسبقة التحديد على النص الصوتي		
See you later. (أراك لاحقاً).	Stuck in traffic. (عالي في زحام المرور).	Yes (نعم).
I'll be late. (سأتأخر).	Start without me. (ابداً بدوني).	No (لا).
I will be <number> minutes late. (سوف أتأخر لمدة من > رقم < الدقائق).	Where are you? (أين أنت؟)	Okay (موافق).
Are you there yet? (هل كنت هنا من قبل؟)	Call me. (اتصل بي).	



### الرد على النص الصوتي

سيعلن نظام Uconnect عن رسائل نصية واردة. اضغط على زر PHONE (الهاتف) وقل Listen (اسماع). (يجب أن يكون لديك هاتف محمول متوافق مترن بنظام Uconnect).

1. بمجرد قراءة رسالة نصية واردة لك، اضغط على زر PHONE (الهاتف) . بعد سماع الصافرة، قل "Reply"

2. استمع إلى مطالبات نظام Uconnect. بعد سماع الصافرة، كرر إحدى الرسائل المحددة مسبقاً، واتبع مطالبات النظام.

**الهاتف**  
إجراء مكالمات هاتفية بخاصية التحدث عن بعد والرد عليها بسهولة باستخدام نظام Uconnect Phonebook (دفتر الهاتف) على شاشة اللمس، فهذا يعني أن النظام جاهزاً. تحقق من الموقع UconnectPhone.com لمعرفة مدى توافق الهاتف المحمول وتليميّات الإقراض.


اضغط على زر PHONE (الهاتف) . بعد سماع الصافرة، قل أيّاً من الأوامر التالية:

- **Call** (الاتصال) بجون سميث
- **Dial** (طلب) رقم 123-456-7890 واتبع مطالبات النظام
- **Redial** (إعادة الطلب) (رقم هاتف المكالمة السابقة الصادرة)
- **Call back** (معاودة الاتصال) (رقم هاتف المكالمة السابقة الواردة)

تلميح: عند إعطاء أمر صوتي، اضغط على زر PHONE (الهاتف) وقل "Call" (اتصال)، ثم قل الاسم تماماً كما يظهر في دفتر الهاتف لديك. عند الاتصال بأرقام هاتف متعددة، يمكنك قول "work Call" (اتصال) بجون سميث (العمل).

• **Play album** (تشغيل الفنان) ببٰيتٰهٰفٰن؛ **Play artist** • (تشغيل الألبوم) الليلٰة؛ **Play song** (تشغيل الأغنية) أنت عمرٰي؛ **Play genre** (تشغيل نوع موسيقٰي) كلاسيكيٰة

تلميح: اضغط على زر "Browse" (استعراض) على شاشة اللمس لمشاهدة جميع ملفات الموسيقٰي على جهاز iPod أو USB. الأوامر الصوتية الخاصة بك يجب أن تتطابق تماماً مع كيفية عرض معلومات الفنان أو الألبوم أو الأغنية أو نوع الموسيقٰي.

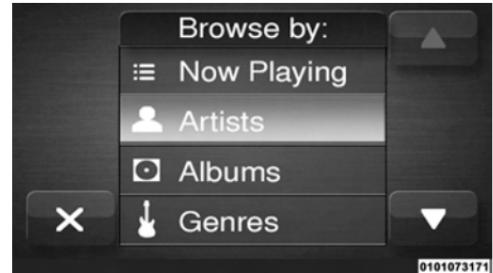


## الأوامر الصوتية الأساسية

يمكن إعطاء الأوامر الصوتية الأساسية الموضحة أدناه في أي وقت أثناء استخدام نظام Uconnect.

اضغط على زر VR (التعرف على الصوت) . بعد سماع الصافرة، قل ...

- **Cancel** (إلغاء) لإيقاف جلسة صوتية حالية
- **Help** (مساعدة) لسماع قائمة الأوامر الصوتية المقترحة
- **Repeat** (تكرار) للاستماع إلى مطالبات النظام مرة أخرى

لاحظ الإشارات المرئية التي تخبرك بحالة نظام التعرف على الصوت. حيث تظهر الإشارات على شاشة اللمس.

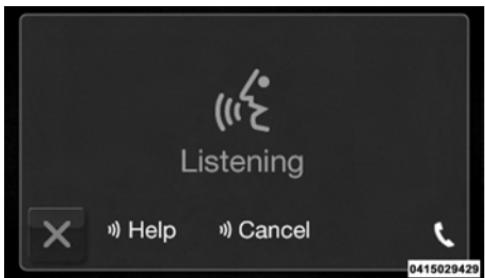

## الوسائط

يوفر Uconnect اتصالات عبر USB و SD و Bluetooth و منفذ الأجهزة الإضافية (إذا كانت السيارة مزودة بذلك). يتوافق تشغيل الصوت فقط لأجهزة USB أو iPod المتصلة. (جهاز مشغل الأقراص المضغوطة عن بعد اختياري ولا يتتوفر في جميع السيارات).

اضغط على زر VR (التعرف على الصوت) . بعد سماع الصافرة، قل أيًا من الأوامر التالية، واتبع المطالبات للانتقال إلى مصدر الوسائط أو لاختيار فنان.

• **Change source to** •  
Bluetooth

iPod (تغيير المصدر إلى) •  
USB (تغيير المصدر إلى) •

## الراديو

استخدم صوتك الوصول بسرعة إلى محطات راديو AM أو FM.

اضغط على زر VR (التعرف على الصوت) . بعد سماع الصافرة، قل ...

- قم بالتوقيف إلى تسعه وخمسون فاصل خمسة من موجة FM
- قم بالتوقيف إلى قناة محطة القرن الصناعي Hits 1 (تمييزات 1)

تمييز: في أي وقت، إذا لم تكن متأكدًا مما ترغب في قوله أو ترغب في تبيينه باستخدام الأمر الصوتي، فاضغط على زر VR (التعرف على الصوت) "Help" (مساعدة) . سوف يوفر النظام لك قائمة من الأوامر.



## ميزة التعرف على الصوت بنظام UCONNECT



- 1 - اضغط لبده تشغيل الراديو أو وظائف الوسائط
- 2 - اضغط لبده مكالمة هاتفية وللرد عليها/إنهاءها وإرسال نص أو استلامه



للبدء

1. تفضل بزيارة [UconnectPhone.com](http://UconnectPhone.com) للتحقق من توافق الجهاز والميزة وللعثور على تعليمات إقران الهاتف.

2. تقليل الضوضاء الموجودة في الخلفية. الرياح ومحادثات الركاب أمثلة على الضوضاء التي قد تؤثر على ميزة التعرف.

3. التحدث بوضوح بنبرة عادية وبمستوى صوت عادي مع الاتجاه إلى الأمام بشكل مستقيم. الميكروفون موضوع في مرآة الرؤية الخلفية ووجه ناحية السائق.

4. في كل مرة تقوم فيها بإعطاء أمر صوتي، يجب عليك أولاً ضغط زر VR (التعرف على الصوت) أو PHONE (الهاتف)، انتظر حتى بعد سماع الصافرة ثم قل الأمر الصوتي.

5. يمكنك مقاطعة رسالة التعليمات أو مطالبات النظام عن طريق الضغط على زر VR (التعرف على الصوت) أو PHONE (الهاتف) ونطق أمر صوتي من الفئة الحالية.

كل ما تحتاجه للتحكم في نظام Uconnect مع صوتك هي الأزرار الموجودة على عجلة القيادة.


### تحذير!

قد السيارة بأمان دائمًا مع وضع يديك على عجلة القيادة. تتحمل أنت المسؤولية الكاملة وتتحمل جميع المخاطر الناجمة عن استخدام ميزات نظام Uconnect وتطبيقاته في السيارة. استخدم نظام Uconnect فقط عندما يكون من الآمن القيام بذلك. قد يؤدي عدم القيام بذلك إلى وقوع حادث يتسبب في حدوث إصابة بالغة أو الوفاة.

### تقديم نظام Uconnect

ابداً باستخدام ميزة التعرف على الصوت بنظام Uconnect مع هذه التلميحات السريعة المقيدة. وهي توفر الأوامر الصوتية الأساسية والتلميحات التي تحتاج إلى معرفتها للتحكم بنظام 5.0.Uconnect .

الميزات الرئيسية:

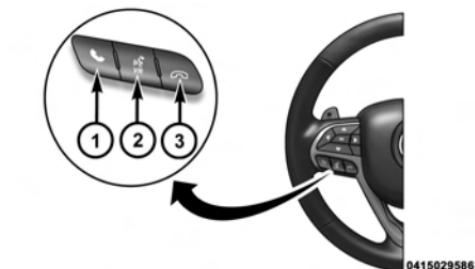

- 1 - اضغط لبده مكالمة هاتفية أو الرد عليها، أو إرسال نص أو استلامه
- 2 - اضغط لبده تشغيل الراديو أو وظائف الوسائط
- 3 - اضغط لإنهاء المكالمة

• شاشة اللمس بقياس 5 بوصات

• ثلاثة أزرار على كل جانب من جانبي شاشة العرض

## تمييزات سريعة لنظام التعرف على الصوت بنظام UCONNECT 5.0/5.0

### NAV

- ميزة التعرف على الصوت بنظام UCONNECT
- تقديم نظام Uconnect
- للبدء
- الأوامر الصوتية الأساسية
- الراديو
- الوسانط
- الهاتف
- الرد على النص الصوتي
- معلومات إضافية



على الهاتف المحمول. يتم نقل هذه التغييرات وتحديثها على نظام **Uconnect Phone** في المرة التالية التي يتم توصيل الهاتف.

#### إجراء مكالمة هاتفية

1. اضغط على زر PHONE (الهاتف) على عجلة القيادة.
2. بعد سماع الصافرة، قل "dial" (طلب) (أو "call" (اتصال) الاسم بالكامل أو رقم الهاتف).

#### تلقي مكالمة - قبول (إنهاء)

1. عند رنين مكالمة ورادءة، أو عندما يتم إعلانها على نظام Uconnect، اضغط على زر Phone (الهاتف).
2. لإنهاء مكالمة، اضغط على زر PHONE (الهاتف).

#### تغيير مستوى الصوت

1. ابدأ الحوار بالضغط على زر PHONE (الهاتف) على الواجهة، ثم اضبط مستوى الصوت أثناء وجود مكالمة عادية.
2. استخدم المقابض الدوار ON/VOLUME (تشغيل/مستوى الصوت) بالراديو لضبط مستوى الصوت على مستوى مرتفع أثناء تحديث نظام Uconnect. يُرجى ملاحظة أن إعداد مستوى الصوت لنظام Uconnect phone مختلف عن إعداد مستوى صوت نظام الصوت.

## تحذير!

قد السيارة بأمان دائمًا مع وضع يديك على عجلة القيادة. تحمل أنت المسؤولية الكاملة وتتحمل جميع المخاطر الناجمة عن استخدام ميزات نظام Uconnect وتطبيقاته في السيارة. استخدم نظام Uconnect فقط عندما يكون من الآمن القيام بذلك. قد يؤدي عدم القيام بذلك إلى وقوع حادث يتسبب في حدوث إصابة بالغة أو الوفاة.

## نظام UCONNECT PHONE

### إقران هاتف

لاستخدام ميزة نظام Uconnect Phone، يجب عليك أولاً إقران هاتف Bluetooth مع نظام Uconnect. راجع الموقع UconnectPhone.com للتعرف على إجراء الإقران الخاص بهاتفك. حتى إذا لم يتم سرد هاتفك، فنفذ إجراء الإقران.

### بدء إجراء الإقران

- قم بتنشيط Bluetooth في هاتفك المحمول.
- اضغط على زر PHONE (الهاتف) في الواجهة.

ملاحظة: في حالة عدم وجود هاتف مقترن بالنظام، سوف تعرض شاشة العرض شاشة مخصصة.

3. اضغط على زر "Yes" (نعم) على شاشة اللمس لبدء إجراء الإقران. ابحث عن جهاز Uconnect Phone على الهاتف المحمول (إذا تم تحديد "No" (لا)، في سيتم عرض شاشة Phone (الهاتف) الرئيسية).

4. عند طلبتك بواسطة الهاتف المحمول، استخدم لوحة مفاتيح لإدخال رقم التعريف الشخصي (PIN) الموضح على شاشة عرض النظام أو أكد على رقم التعريف الشخصي (PIN) المعروض على الهاتف المحمول.

ملاحظة: أثناء مرحلة الإقران، سوف تظهر شاشة توضح تقدم العملية.

- من شاشة Phone (الهاتف) يمكنك دائمًا إقران هاتف محمول. اضغط على زر "Settings" (الإعدادات)، ثم اضغط على زر "Add Device" (إضافة جهاز) على شاشة اللمس، وتابع كما هو موضح أعلاه.

- في حالة اكتمال إجراء الإقران بنجاح، سوف تظهر شاشة. اضغط على زر "Yes" (نعم) عند ظهور سؤال لإقران الهاتف المحمول كفضل (سيكون للهاتف المحمول الأولوية عن جميع الهواتف المحمولة الأخرى التي سيتم إقرانها فيما بعد). في حالة عدم وجود أجهزة أخرى مقترنة، سوف يعتبر النظام أول جهاز مقترن الجهاز المفضل.

ملاحظة: يتم تحديد الأولوية تبعاً لترتيب توصيل الهواتف المحمولة التي لم يتم تعينها كفضيلة. سوف يتم إعطاء الأولوية العليا لأخر هاتف تم توصيله.

تنزيل دفتر الهاتف - نقل دفتر الهاتف من الهاتف المحمول إذا كانت السيارة مزودة بنظام Uconnect Phone وكان مدعوماً بصفة خاصة من قبل هاتفك، فيسألك عما إذا كنت ترغب في تنزيل الأسماء (أسماء نصية) وإدخالات رقمية من دفتر الهاتف المحمول. قد تدعم بعض الهواتف المحمولة المزودة بتقنية Bluetooth مع خاصية الوصول إلى دفتر الهاتف هذه الميزة. راجع UconnectPhone.com للتعرف على الهواتف المدعومة.

ببدأ التنزيل والتحديث، إذا كان مدعوماً، بمجرد اتصال الهاتف اللاسلكي المزود بتقنية Bluetooth بنظام Uconnect Phone، على سبيل المثال، بعد بدء تشغيل السيارة.

### ملاحظة:

- سيتم تنزيل 2000 إدخال كحد أقصى لكل هاتف إلى جانب تحديثها في كل مرة يتم توصيل هاتف ببنظام Uconnect Phone.

- اعتاداً على الحد الأقصى لعدد الإدخالات التي يتم تنزيلها، قد يحدث تأخير قصير قبل أن يمكن استخدام الأسماء التي تم تنزيلها حديثاً. وإذا توفرت الأسماء التي تم تنزيلها مسبقاً، فستكون متوفرة للاستخدام.

- يمكن فقط الوصول إلى دفتر الهاتف الخاص بالهاتف المحمول المتصل الآن.

- لا يمكن تحرير دفتر الهاتف الذي تم تنزيله أو حذفه على نظام Uconnect Phone. يمكن فقط تعديل الأسماء

## نظام UCONNECT PHONE

### UCONNECT PHONE

- نظام UCONNECT PHONE
- إقران هاتف
- تنزيل دفتر الهاتف - نقل دفتر الهاتف من الهاتف المحمول
- إجراء مكالمة هاتفية
- تلقي مكالمة - قبول ( وإنهاء )
- تغيير مستوى الصوت

## الاستعراض

اضغط على زر "Browse" (استعراض) على شاشة اللمس لتحديد Artist (الفنان) أو Albums (الألبومات) أو Genres (أنواع الموسيقى) أو Songs (الأغاني) أو Folders (قوائم التشغيل) أو Playlists (المجلدات) من جهاز USB/iPod. بمجرد إجراء التحديد المرغوب، يمكنك الاختيار من الوسائط المتوفرة بالضغط على الزر الموجود على شاشة اللمس. اضغط على زر "Exit" (خروج) على شاشة اللمس إذا كنت ترغب في إلغاء وظيفة الاستعراض.

## وضع AUX (الأجهزة الإضافية)

يتم الدخول إلى وضع AUX (الأجهزة الإضافية) عن طريق إدخال جهاز AUX باستخدام كابل صوت استيريو مع مقبس الصوت 3.5 مم في منفذ AUX أو عن طريق الضغط على زر MEDIA (الوسائط) الموجود في الواجهة. بمجرد التوأجد في وضع Media (الوسائط)، اضغط على زر "Source" (المصدر) على شاشة اللمس وحدد "AUX" (الأجهزة الإضافية).

## إدخال الجهاز الإضافي

أدخل كابل الجهاز الإضافي برفق في منفذ AUX. إذا قمت بإدخال جهاز إضافي أثناء وجود مفتاح التشغيل في وضع

## التحكم في الجهاز الإضافي

لا يمكن توفير التحكم في الجهاز الإضافي (على سبيل المثال، اختيار قوائم التشغيل، والتشغيل، والتقطيم السريع، إلخ) بواسطة الراديو؛ استخدم مفتاح تحكم الجهاز بدلاً من ذلك. قم بضبط مستوى الصوت باستخدام المقاييس الدوار VOLUME/MUTE (مستوى الصوت/كتم الصوت) أو باستخدام مستوى صوت الجهاز الملحق.

تعمل وحدة الراديو بالسيارة كمضخم لخرج الصوت الصادر عن الجهاز الإضافي. لذا، إذا تم ضبط مفتاح التحكم في مستوى الصوت بالجهاز الإضافي على منخفض للغاية، فسوف تكون إشارة الصوت غير كافية لوحدة الراديو ل تقوم بتشغيل الموسيقى بالجهاز.

## وضع Bluetooth

يتم دخول وضع بث الصوت عبر تقنية Bluetooth (BTSA) أو وضع Bluetooth عن طريق إقران جهاز Uconnect Bluetooth يحتوي على موسيقى بنظام

قبل المتابعة، يجب إقران جهاز Bluetooth مع هاتف بنظام Uconnect للاتصال بنظام

راجع "إجراء الإقران" في هذا الدليل للحصول على مزيد من التفاصيل.

بمجرد إقران جهاز Bluetooth بنظام Uconnect، يمكّن ضبط على زر MEDIA (الوسائط) الموجود في الواجهة. بمجرد التوأجد في وضع Media (الوسائط)، اضغط على زر "Source" (المصدر) على شاشة اللمس وحدد "Bluetooth".

ملاحظة: لاطلاق على التعليمات الخاصة بتوافق الهاتف المحمول وأقرانه، يُرجى زيارة الموقع [UconnectPhone.com](http://UconnectPhone.com).

## Uconnect LIVE

يتوفر تطبيق Uconnect LIVE في Apple Store أو Google Play Store. يمكن مشاهدة مجموعة كاملة من التطبيقات والتحكم فيها من خلال شاشة اللمس لنظام Uconnect. تم تصميم التطبيقات للتتأكد من أن تركيز السائق يظل مركزاً على القيادة. للحصول على مزيد من المعلومات، راجع [www.driveuconnect.eu/en/features/uconnectlive](http://www.driveuconnect.eu/en/features/uconnectlive)

## المعلومات

اضغط على زر "Info" (المعلومات) بشاشة اللمس لعرض معلومات المسار الحالي. اضغط على زر "X" على شاشة اللمس لإلغاء هذه الميزة.

## التشغيل العشوائي

اضغط على زر "Shuffle" (التشغيل العشوائي) على شاشة اللمس لتشغيل التحديات الموجودة على جهاز USB/iPod. بترتيب عشوائي لتوفير تغيير مسل. اضغط على زر "Shuffle" (التشغيل العشوائي) على شاشة اللمس مرة أخرى لإيقاف تشغيل هذه الميزة.

## الصوت Audio

راجع "تشغيل وضع Radio (الراديو)" لضبط إعدادات الصوت.

## تكرار

اضغط على زر "Repeat" (التكرار) على شاشة اللمس لتكرار تحديد الأغنية. لإلغاء التكرار، اضغط على زر "Repeat" (التكرار) على شاشة اللمس مرة أخرى.

## وضع Disc (القرص) - إذا كانت السيارة مزودة بذلك

قد تكون السيارة مزودة بمشغل أقراص يعمل عن بعد موجود في علبة تخزين الكونسول المركزي.

## زر الإخراج — إخراج قرص

اضغط على زر الإخراج لإخراج القرص. إذا كنت قد قمت بإخراج قرص ولم تقم بازالته في خلال 10 ثوان، فسيتم إعادة تحميله. إذا لم يتم إزالة القرص، فسيعيد الراديو إدخال القرص ولكن لن يقوم بتشغيله.

يمكن إخراج القرص أثناء وجود مفتاح التشغيل والراديو في وضع OFF (إيقاف التشغيل).

## وضع USB/iPod

يتم الدخول إلى وضع USB/iPod عن طريق إما إدراج محرك أقراص USB أو كابل iPod في منفذ iPod، أو لمس زر MEDIA (الواسطة) الموجود على الواجهة. بمجرد التواجد في "Source" Media (الواسطة)، اضغط على زر "Source" (المصدر) على شاشة اللمس وحدد "USB/iPod".

## إدخال جهاز USB/iPod

أدخل جهاز USB/iPod برفق في منفذ USB. إذا أدخلت جهاز USB/iPod أثناء وجود مفتاح التشغيل في وضع ON (التشغيل)، فسيتم تبديل الوحدة إلى وضع USB/iPod وستبدأ في العمل عند إدخال الجهاز. ستعرض الشاشة رقم المسار الصوتي والזמן المقارن بالدقائق والثوانى. سيدأ التشغيل في بداية المسار 1.

يتم الدخول إلى وضع Disc (القرص) عن طريق الضغط على زر MEDIA (الواسطة) في الواجهة. بمجرد التواجد في "Source" Media (الواسطة)، اضغط على زر "Source" (المصدر) على شاشة اللمس وحدد "Disc" (القرص).

## إدخال القرص المضغوط


أدخل قرصاً واحداً برقق في مشغل الأقراص بحيث يكون ملصق القرص متبعاً للرسم التوضيحي المشار إليه على المشغل. سيتم سحب القرص أوتوماتيكياً إلى داخل مشغل الأقراص وسيضيء رمز القرص في شاشة الراديو. إذا لم يدخل القرص في الفتحة بأكثر من 2.5 سم (0.9 بوصة)، فمن الممكن أن يكون هناك قرص محمل بالفعل ويجب إخراجه قبل تحميل قرص جديد.

إذا قمت بإدخال قرص أثناء وجود مفتاح التشغيل في وضع ON (التشغيل) مع تشغيل الراديو، فسيتم تبديل الوحدة إلى وضع Disc (القرص) وستبدأ في العمل عند إدخال القرص. ستعرض الشاشة رقم المسار الصوتي والזמן المقارن بالدقائق والثوانى. سيدأ التشغيل في بداية المسار 1.

## الاستعراض

اضغط على زر "Browse" (استعراض) على شاشة اللمس للتنقل عبر المسار المطلوب على القرص ولتحديده. اضغط على زر "Exit" (خروج) على شاشة اللمس إذا كنت ترغب في إلغاء وظيفة الاستعراض.

## تشغيل وضع MEDIA (الوسائط)

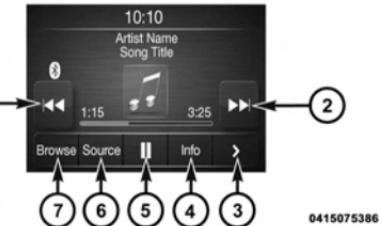

0415075386

- 1 - زر SEEK Down (البحث لأسفل) ◀◀  
2 - زر SEEK Up (البحث لأسفل) ▶▶

- 3 — الوظائف الإضافية  
4 — المعلومات (المعلومات)  
5 — الإيقاف المؤقت/ التشغيل  
6 — Source (المصدر)  
7 — Browse (استعراض)

يتم الدخول إلى وضع Media (الوسائط) بالضغط على زر MEDIA في وضع Media (الوسائط)، بمجرد التواجد (المصدر) على شاشة اللمس مع زر الوضع المطلوب على شاشة اللمس. يعد كل من القرص (إذا كانت السيارة مزودة بذلك) و USB SD (إذا كانت السيارة مزودة بذلك) وبطاقة AUX (إذا كانت السيارة مزودة بذلك) و Bluetooth (إذا كانت السيارة مزودة بذلك) من مصادر Media (الوسائط).

### Now Playing • ( التشغيل الان )

- Artists (الفنانون)
- Albums (الألبومات)
- Genres (أنواع الموسيقى)
- Songs (الأغاني)
- Playlists (قوائم التشغيل)

### Folders (المجلدات)

يمكنك الضغط على زر "Source" (المصدر) أو "Pause/Play" (إيقاف المؤقت/ التشغيل) أو "Info" (المعلومات) على شاشة اللمس للتعرف على معلومات الفنان الجاري تشغيل أغنيته.

### وظائف الوسائط العامة

#### زر Seek Up (البحث لأعلى) ▶▶ / Seek Down (البحث لأسفل) ◀◀

اضغط على زر "Right Arrow" (سهم لليمين) ▶▶ على شاشة اللمس وحرره للوصول إلى التحديد التالي. اضغط على زر "Left Arrow" (سهم لليسار) ◀◀ على شاشة اللمس.

وحرره للعودة إلى بداية التحديد الحالي أو العودة إلى بداية التحديد السابق إذا كان القرص في أول ثانية من تشغيل التحديد الحالي.

### زر Fast Seek Up (البحث السريع لأعلى) ▶▶

اضغط مطولاً على زر "Right Arrow" (سهم لليمين) ▶▶ على شاشة اللمس وسيبدأ الوضع المطلوب في التقديم السريع خلال المسار الصوتي الحالي حتى يتم تحرير الزر على شاشة اللمس.

### زر Fast Seek Down (البحث السريع لأسفل) ◀◀

اضغط مطولاً على زر "Left Arrow" (سهم لليسار) ◀◀ على شاشة اللمس وسيبدأ الوضع المطلوب في التراجع خلال المسار الصوتي الحالي حتى يتم تحرير الزر الموجود على شاشة اللمس.

### المصدر

اضغط على زر "Source" (المصدر) على شاشة اللمس لتحديد مصدر الصوت المطلوب: القرص (إذا كانت السيارة مزودة بذلك) و USB SD (إذا كانت السيارة مزودة بذلك) و AUX (الأجهزة الإضافية) و Bluetooth (إذا كانت السيارة مزودة بذلك). ستنتهي مهلة الشاشة بعد بضع ثوان ويتم الرجوع إلى شاشة الراديو الأساسية في حالة عدم إجراء تحديد.

## وضع MEDIA (الوسائط)

- ١٦. .... تشغيل وضع MEDIA (الوسائط)
- ١٦. .... وظائف الوسائط العامة
- ١٧. .... وضع Disc (القرص) - إذا كانت السيارة مزودة بذلك
- ١٧. .... وضع USB/iPod
- ١٨. .... وضع AUX (الأجهزة الإضافية)
- ١٨. .... وضع Bluetooth
- ١٨. .... Uconnect LIVE



يؤدي الضغط على زر "All" ( الكل ) على شاشة اللمس إلى عرض جميع المحطات المضبوطة مسبقاً في هذا الوضع.

الصوت

• مستوى الصوت المعدل بالسرعة — اضغط على زر "Speed Adjusted Volume" (ضبط مستوى الصوت) على شاشة اللمس للاختيار بين وضع إيقاف التشغيل أو 1 أو 2 أو 3. وسيؤدي ذلك إلى انخفاض مستوى صوت الراديو بشكل يتناسب مع انخفاض سرعة السيارة. اضغط على زر "سهم لخلف" على شاشة اللمس عند الانتهاء.

1. اضغط على زر SETTINGS (الإعدادات) الموجود على الجانب الأيمن واجهة الراديو. في حالة عدم وجود زر settings (الإعدادات)، اضغط على زر MORE (المزيد) ثم على زر "Settings" (الإعدادات) على شاشة اللمس.

2. قم بالتمرير لأسفل واضغط على زر "AUDIO" (الصوت) على شاشة اللمس لفتح قائمة Audio (الصوت).

3. تعرض القائمة Audio (الصوت) الخيارات التالية الكinchصيص إعدادات الصوت:

• المعادل — اضغط على زر "Equalizer" (المعادل) على شاشة اللمس لضبط Bass (الجهير) و Mid (النطاق المتوسط) و Treble (الصوت المرتفع). استخدم أزرار "+" أو "-" الموجودة على شاشة اللمس لضبط المعادل على الإعدادات المطلوبة. اضغط على زر "سهم لخلف" على شاشة اللمس عند الانتهاء.

• التوازن/الخفت — اضغط على زر "Balance/Fade" (التوازن/الخفت) على شاشة اللمس لضبط الصوت الصادر من مكبرات الصوت. استخدم زر "السهم" الموجود على شاشة اللمس لضبط مستوى الصوت من مكبرات الصوت الأمامية والخلفية أو مكبرات الصوت اليمنى واليسرى. اضغط على زر المركز "C" على شاشة اللمس لإعادة ضبط التوازن والخفت إلى إعداد المصانع. اضغط على زر "سهم لخلف" على شاشة اللمس عند الانتهاء.

• مستوى الصوت المعدل بالسرعة — اضغط على زر "Speed Adjusted Volume" (ضبط مستوى الصوت) على شاشة اللمس للاختيار بين وضع إيقاف التشغيل أو 1 أو 2 أو 3. وسيؤدي ذلك إلى انخفاض مستوى صوت الراديو بشكل يتناسب مع انخفاض سرعة السيارة. اضغط على زر "سهم لخلف" على شاشة اللمس عند الانتهاء.

• علو الصوت — اضغط على زر "Loudness" (علو الصوت) على شاشة اللمس لتحديد ميزة علو الصوت. عند تنشيط هذه الميزة، تعمل على تحسين جودة الصوت بمستويات صوت منخفضة.

#### ضبط الساعة

1. في حالة وجود زر SETTINGS (الإعدادات) في الجانب الأيمن من الواجهة، اضغط على هذا الزر. إذا لم يكن موجوداً، فاضغط على زر "MORE" (المزيد) بالواجهة، ثم على زر "Settings" (الإعدادات) على شاشة اللمس.

2. حدد الزر "Clock and Date" (الساعة والتاريخ) على شاشة اللمس.

3. بعد ذلك، حدد "Set Time" (ضبط الوقت) لتغيير الوقت.

4. حدد "Set Date" (ضبط التاريخ) لتغيير التاريخ.

5. لضبط الوقت، حدد سهمي "البحث أعلى" ▶▶ أو "البحث لأسفل" ▶◀ ، حسب الاقتضاء. حدد "12 hrs vs 24 hrs" (تنسيق 12 ساعة مقابل تنسيق 24 ساعة) أو "Time" (صباحاً) أو "PM" (مساء) أو حدد "AM" (المناطق الزمنية) (إذا كانت السيارة مزودة بذلك).  
6. اختر "Done" (تم) عند الانتهاء.

## وضع RADIO (الراديو)

الراديو مزود بالأوضاع التالية:

FM

• SW/LW/MW AM – إذا كانت السيارة مزودة بذلك

• DAB/DAB+ - إذا كانت السيارة مزودة بذلك

اضغط على زر RADIO (الراديو) الموجود بالواجهة للدخول إلى وضع Radio (الراديو). يمكن تحديد أوضاع المخالف المختلفة؛ FM/AM/SW/LW/MW/DAB/DAB+ - إذا كانت السيارة مزودة بذلك، بالضغط على الأزرار المناظرة على شاشة اللمس في وضع Radio (الراديو).

## مقبض Volume/Mute (مستوى الصوت/كتم الصوت)

ادر المقابض الدوار VOLUME/MUTE (مستوى الصوت/كتم الصوت) لضبط مستوى الصوت. عند تشغيل النظام الصوتي، سيتم ضبط الصوت على نفس مستوى الصوت الذي تم تشغيله في آخر مرة.

اضغط على زر VOLUME/MUTE (مستوى الصوت/كتم الصوت) لكتم صوت النظام. اضغط على زر VOLUME/MUTE (مستوى الصوت/كتم الصوت) مرة أخرى لإلغاء كتم صوت النظام.

## مقبض مفتاح التحكم (ادخال/استعراض) و TUNE/SCROLL (التوليف/التمرير)

ادر مقبض مفتاح التحكم (التوليف/التمرير) الدوار باتجاه عقارب الساعة لزيادة تردد محطة الراديو أو عكس اتجاه عقارب الساعة لتقليل تردد محطة الراديو. اضغط على زر ENTER/BROWSE (ادخال/استعراض) لاختيار التحديد.

## وظائف البحث

### البحث لأعلى▶▶▶

اضغط على زر "البحث لأعلى" ▶▶▶ الموجود بشاشة اللمس ثم حرره لتوليف الراديو على المحطة أو القناة التالية التي يمكن الاستماع إليها.

خلال وظيفة البحث لأعلى، في حالة وصول الراديو إلى محطة البداية بعد المرور عبر النطاق بالكامل لمرتين، سيتوقف الراديو عند المحطة التي بدأ منها.

### البحث السريع لأعلى▶▶▶

اضغط مطولاً على زر "البحث لأعلى" ▶▶▶ على بشاشة اللمس لتقديم الراديو خلال المحطات أو القنوات المتاحة بمعدل أسرع، وإيقاف الراديو عند المحطة أو القناة التالية التي يمكن الاستماع إليها.

## البحث لأسفل▶▶▶

اضغط على زر "البحث لأسفل" ▶▶▶ الموجود بشاشة اللمس ثم حرره لتوليف الراديو على المحطة أو القناة التالية التي يمكن الاستماع إليها.

خلال وظيفة البحث لأسفل، في حالة وصول الراديو إلى محطة البداية بعد المرور عبر النطاق بالكامل لمرتين، سيتوقف الراديو عند المحطة التي بدأ منها.

### البحث السريع لأسفل▶▶▶

اضغط مطولاً على زر "البحث لأسفل" ▶▶▶ على شاشة اللمس للرس تقديم الراديو خلال المحطات أو القنوات المتاحة بمعدل أسرع، وإيقاف الراديو عند المحطة أو القناة التالية التي يمكن الاستماع إليها.

### إعداد مفاتيح الضبط المسبق

الأزرار المضبوطة مسبقاً متوفرة في جميع أوضاع Radio (الراديو)، ويتم تنشيطها من خلال الضغط على أي زر من الأزرار الأربع "مسبق الضبط" على شاشة اللمس، الموجود في أعلى الشاشة.

عندما تستقبل إحدى المحطات التي ترغب في حفظها بالذاكرة، اضغط مطولاً على زر الرقم المطلوب لأكثر من ثانيةين أو حتى سماع صافرة تأكيد.

يختزن الراديو ما يصل إلى 12 مفتاح ضبط مسبق في كل وضع من أوضاع Radio (الراديو). ويمكن رؤية أربعة مفاتيح ضبط مسبق في أعلى شاشة الراديو.

## وضع RADIO (الراديو)

- وضع RADIO (الراديو) .....
- مقبض Volume/Mute (مستوى الصوت/كتم الصوت) .....
- مقبض مفتاح التحكم TUNE/SCROLL (إدخال/استعراض) و ENTER/BROWSE (التوقيف/التمرير) .....
- وظائف البحث .....
- إعداد مفاتيح الضبط المسبق .....
- الصوت .....
- ضبط الساعة .....

#### ملاحظة:

- يمكن لشركة FCA أو الوكيل الاتصال بك مباشرةً بخصوص تحديثات البرامج.
- للمساعدة في زيادة تحسين أمان السيارة والتقليل من المخاطر المحتملة بشأن انتهاء الأمان، ينبغي على ملاك السيارة:
  - مراجعة العنوان [www.driveuconnect.com](http://www.driveuconnect.com) / software-update بانتظام لمعرفة تحديثات برنامج Uconnect المتاحة.
  - الاتصال بجهاز الوسانط الموثوق بها واستخدامها من دون غيرها (مثل الهواتف المحمولة الشخصية، أجهزة USB، الأقراص المضغوطة).
- لا يمكن ضمان خصوصية أية اتصالات سلكية ولاسلكية. يمكن لأطراف خارجية اعتراض المعلومات والاتصالات الخاصة على نحو مخالف للقانون من دون موافقتك. لمزيد من المعلومات، راجع "نظام الشخص الذاتي (OBD II) Cybersecurity" في دليل المالك.

تتطلب سيارتك، شأنها شأن الكمبيوتر أو الأجهزة الأخرى، تحديثات البرامج لتحسين قابلية استخدام الأنظمة وأدائها أو لتقليل المخاطر المحتملة بشأن الوصول غير المصرح به أو غير القانوني لأنظمة السيارة.

قد لا يزال خطر الوصول غير المرخص وغير القانوني إلى سيارتك قائماً، حتى في حالة تثبيت أحدث إصدار من برنامج السيارة (مثل برنامج Uconnect).).

#### تحذير!

- من غير الممكن معرفة جميع النتائج الممكنة أو التنبؤ بها إذا تم اختراق أنظمة السيارة. من الممكن أن يضعف أداء أنظمة السيارة، بما في ذلك الأنظمة المتعلقة بالأمان، أو قد يحدث فقد في التحكم في السيارة الأمر الذي يؤدي إلى وقوع حوادث تتضمن إصابة بالغة أو الوفاة.
- لا تدخل وسانط (على سبيل المثال، USB أو بطاقة SD أو قرص مضغوطة) في سيارتك إلا إذا كان مصدرها موثوق به. يمكن أن تتطوي الوسانط من مصدر غير معروف على برامج ضارة، وإذا تم تثبيتها بسيارتك، فقد تزيد من احتمالية اختراق أنظمة السيارة لديك.
- وكالعادة دائماً، إذا واجهت سلوكاً غير معتمد من السيارة، فاذهب بالسيارة إلى أقرب وكيل معتمد على الفور.

#### VOLUME/MUTE - 8 (مستوى الصوت/كتم الصوت)

أدر المقض الدوار لضبط مستوى الصوت. اضغط على زر VOLUME/MUTE (مستوى الصوت/كتم الصوت) لكتم صوت النظام.

#### PHONE - 9 (الهاتف)

اضغط على زر PHONE (الهاتف) على الواجهة للوصول إلى ميزة نظام Uconnect Phone.

#### MEDIA - 10 (الوسائط)

يؤدي الضغط على زر MEDIA (الوسائط) في الواجهة إلى السماح لك بالتحويل إلى وضع Media (الوسائط): القرص المضغوط (إذا كانت السيارة مزودة بذلك) أو USB/iPOD أو AUX أو بطاقة SD (إذا كانت السيارة مزودة بذلك) وBluetooth.

#### CYBERSECURITY

قد تكون سيارتك سيارة متصلة ويمكن أن تكون مزودة بكلتا الشبكات السلكية واللاسلكية. تتيح هذه الشبكات لسيارتك إرسال المعلومات واستقبالها. تتيح هذه المعلومات عمل الأنظمة والمزايا في سيارتك كما ينبغي.

قد تكون السيارة مزودة بميزات أمان محددة لتقليل خطر الوصول غير المصرح به وغير القانوني لأنظمة السيارة والاتصالات اللاسلكية. تتطور تقنية برامج السيارة باستمرار بمرور الوقت وتقوم FCA US LLC، بالتعاون مع مورديها، بالتحفيظ واتخاذ الخطوات المناسبة حسب الحاجة. قد

### SETTINGS - 3 (الإعدادات)

اضغط على زر SETTINGS (الإعدادات) الموجود بالواجهة لعرض الميزات القابلة للبرمجة بواسطة العميل.

### MORE - 4 (المزيد)

اضغط على زر MORE (المزيد) الموجود بالواجهة للوصول إلى خيارات إضافية.

### ENTER/BROWSE - 5 (إدخال/استعراض) TUNE/SCROLL - 5 (التوليف/التمرير)

اضغط على الزر ENTER/BROWSE (إدخال/استعراض) لقبول التحديد المميز على الشاشة. أدر المقاييس الدوار TUNE/SCROLL (التوليف/التمرير) للتटمير خلال قائمة أو توليف محطة الراديو.

### BACK - 6 (رجوع)

اضغط على الزر BACK (رجوع) للعودة إلى قائمة أو شاشة سابقة.

### SCREEN OFF - 7 (إيقاف تشغيل الشاشة)

اضغط على زر SCREEN OFF (إيقاف تشغيل الشاشة) لإيقاف تشغيل شاشة اللمس. لتشغيل شاشة اللمس، اضغط على الشاشة فقط.

### نظام Uconnect 5.0 غير مزود بمركز مجموعة أجهزة القياس المدمج



### RADIO - 1 (الراديو)

اضغط على زر RADIO (الراديو) الموجود بالواجهة للدخول إلى وضع RADIO (الراديو). يمكن تحديد أوضاع المواتف المختلفة، FM/AM/SW/LW/MW/DAB/DAB+ (إذا كانت السيارة مزودة بذلك) بالضغط على الأزرار المناظرة على شاشة اللمس في وضع Radio (الراديو).

### COMPASS - 2 (البوصلة)

اضغط على زر COMPASS (البوصلة) الموجود بالواجهة لعرض اتجاه السيارة الحالي.

### SCREEN OFF - 7 (إيقاف تشغيل الشاشة)

اضغط على زر SCREEN OFF (إيقاف تشغيل الشاشة) في الواجهة لإيقاف تشغيل شاشة اللمس. ولتشغيل الشاشة مرة أخرى، ما عليك سوى الضغط على شاشة اللمس.

### VOLUME & MUTE - 8 (مستوى الصوت وكتم الصوت)

أدر المقاييس الدوار لضبط مستوى الصوت. اضغط على الزر Mute (كتم الصوت) لكتم صوت النظام.

### PHONE - 9 (الهاتف)

اضغط على الزر Phone (الهاتف) للوصول إلى ميزة نظم Uconnect Phone.

### MEDIA - 10 (الوسائط)

اضغط على زر Media (الوسائط) في الواجهة للوصول إلى مصادر الوسائط مثل: القرص وجهاز USB وSD وAUX (إذا كانت السيارة مزودة بالإصافحة) وBluetooth (إذا كانت السيارة مزودة بذلك).

### 11 - البحث لأعلى/البحث لأسفل

اضغط على أزرار "البحث لأعلى" ▶▶ و "البحث لأسفل" ▶◀ على شاشة اللمس للبحث عبر محطات الراديو في موجات FM/AM/SW/LW/MW/DAB/DAB+. ابحث عبر المسارات الموجودة في القرص المضغوط (إذا كانت السيارة مزودة بذلك).


## تعريف الراديو

نظام **Uconnect 5.0** مزود بمركز مجموعة أجهزة القياس المدمج



0401001303

نظام **Uconnect 5.0** غير مزود مركز مجموعة أجهزة القياس المدمج

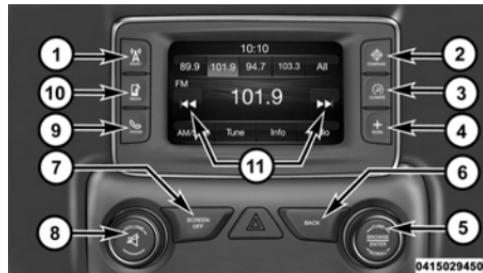

0415029450

## RADIO - 1 (الراديو)

اضغط على زر RADIO (الراديو) الموجود بالواجهة للدخول إلى وضع Radio (الراديو). يمكن تحديد أوضاع الموالف المختلفة؛ FM/AM/SW/LW/MW/DAB/DAB+ - إذا كانت السيارة مزودة بذلك، بالضغط على الأزرار المناظرة على شاشة اللمس في وضع Radio (الراديو).



0501043050

## الميزات الرئيسية:

- شاشة اللمس بقياس 5 بوصات

## COMPASS - 2 (الوصلة)

اضغط على زر COMPASS (الوصلة) الموجود بالواجهة لعرض اتجاه السيارة الحالي.

## CLIMATE - 3 (درجة الحرارة)

اضغط على زر CLIMATE (درجة الحرارة) على الواجهة للوصول إلى مفاتيح التحكم في Climate (درجة الحرارة).

## MORE - 4 (المزيد)

اضغط على زر MORE (المزيد) الموجود بالواجهة للوصول إلى خيارات إضافية.

## ENTER/BROWSE (الدخول/استعراض) 5 و TUNE/SCROLL (التوليف/التمرير) 6

اضغط على الزر ENTER/BROWSE (الدخول/استعراض) لتثبيت المميز على الشاشة. أدر المقاييس الدوار TUNE/SCROLL (التوليف/التمرير) للتتمرير خلال قائمة أو توليف محطة الراديو.

## BACK - 6 (رجوع)

اضغط على الزر BACK (رجوع) للعودة إلى قائمة أو شاشة سابقة.

- ثلاثة أزرار على كل جانب من جانبي شاشة العرض

- التحدث عن بعد/Bluetooth

نظام **Uconnect 5.0** مزود بمركز مجموعة أجهزة القياس المدمج

## تعريف الراديو

- ٨.. ..... • تعريف الراديو .....
- ٨.. ..... • نظام **Uconnect 5.0** مزود بمركز مجموعة أجهزة القياس المدمج .....
- ٩.. ..... • نظام **Uconnect 5.0** غير مزود بمركز مجموعة أجهزة القياس المدمج .....
- ١٠..... • نظام **CYBERSECURITY** .....



تؤمن الجهة المصنعة للراديو بأن الراديو اللاسلكي الداخلي  
آمن للاستخدام من قبل العملاء. مستوى الطاقة المنبعثة أقل  
بكثير من الطاقة الكهرومغناطيسية التي تصدرها الأجهزة  
اللاسلكية كالهاتف المحمولة مثلاً. ولكن، قد يكون استخدام  
أجهزة الراديو اللاسلكية مقيداً في بعض الحالات أو بعض  
البيئات، مثل داخل الطائرات. فإذا لم تكن متاكداً من وجود  
تقييدات، فننصحك بشدة بضرورة طلب التخويل قبل تشغيل  
الراديو اللاسلكي.

## تحذير!

- قد السيارة بأمان دائمًا مع وضع يديك على عجلة القيادة. تحمل أنت المسؤولية الكاملة وتحمل جميع المخاطر الناجمة عن استخدام ميزات نظام Uconnect فقط عندما يكون من الآمن القيام بذلك. قد يؤدي عدم القيام بذلك إلى وقوع حادث يتسبب في حدوث إصابة بالغة أو الوفاة.

تأكد من قراءة جميع الأشخاص لهذا الدليل بعناية قبل استخدام النظام. فهو يحتوي على إرشادات حول كيفية استخدام النظام بطريقة آمنة وفعالة.

لا تثبت أي شيء على شاشة اللمس، القيام بذلك قد يتسبب في تلف شاشة اللمس.

يرجى قراءة احتياطات السلامة هذه واتباعها. إن عدم القيام بذلك قد يتربّط عليه حدوث إصابات أو تلف للممتلكات.

انظر إلى الشاشة فقط عند القيام بذلك بشكل آمن. إذا كان يلزم النظر لفترة طويلة إلى الشاشة، ففتح إلى منطقة آمنة وقم بتعشيق فرامل التوقف.

توقف عن استخدام النظام على الفور إذا حدثت مشكلة. إن عدم القيام بذلك قد يؤدي إلى حدوث إصابة أو تلف في المنتج. أرجعه إلى الوكيل المعتمد لإصلاحه.

## الاستخدام الآمن لنظام Uconnect

- تأكد أن مستوى صوت النظام مضبوط على مستوى يسمح لك بسماع حركة المرور الخارجية وسيارات الطوارئ.

## لتنظيف عدسة الميكروfiber لتنظيف شاشة اللمس.

- إذا لزم الأمر، فاستخدم قطعة قماش خالية من النسالة تم غمرها في محلول تنظيف، مثل كحول الأيزوبروبيل أو محلول من كحول الأيزوبروبيل والماء بنسبة 50:50. تأكد من اتباع احتياطات وتوجيهات الجهة المصنعة للمادة المذكورة.

## محرك الأقراص

- تجنب إدخال أية أقراص تالفة أو مخدوشة أو متفسخة في مشغل الأقراص.

- يجب عدم استخدام الأقراص التي تم تعديلها باستخدام الملصقات في مشغل الأقراص.

- لا تقم بإدخال أكثر من قرص واحد في كل مرة في فتحة محرك الأقراص.

## معلومات الأمان

## التعرض لإشعاع تردد اللاسلكي

- يعمل الراديو اللاسلكي الداخلي وفق التوجيهات المذكورة في مقاييس وتوصيات أمان تردد الراديو، والتي تعكس إجماع الهيئة العلمية.

## شاشة اللمس

- لا تلمس الشاشة بأية أشياء صلبة أو حادة (قلم أو جهاز تخزين USB أو مجوهرات، إلخ) حيث قد تتسبب في خدش سطح شاشة اللمس!

## إرشادات السلامة

- إرشادات السلامة .....
- الاستخدام الآمن لنظام Uconnect .....
- شاشة اللمس .....
- محرك الأقراص .....
- معلومات الأمان .....



# جدول المحتويات

٣ .....	إرشادات السلامة .....	١
٧ .....	تعريف الراديو .....	٢
١١ .....	وضع RADIO (الراديو) .....	٣
١٥ .....	وضع MEDIA (الوسائط) .....	٤
١٩ .....	نظام UCONNECT PHONE .....	٥
٢٣ .....	تلميحات سريعة لنظام التعرف على الصوت بنظام UCONNECT 5.0/5.0 NAV .....	٦
٢٩ .....	إعدادات نظام UCONNECT .....	٧
٣١ .....	زر MORE (المزيد) .....	٨



## UCONNECT 5.0

# ملحق دليل المالك

17UC5-526-ARA-AA

الإصدار الأول  
Uconnect 5.0

طبع في الولايات المتحدة الأمريكية

حقوق النشر © محفوظة لصالح شركة FCA US LLC لعام 2016. جميع الحقوق محفوظة.  
إن كل من Chrysler و Dodge و Ram و Jeep و Mopar هي علامات تجارية مسجلة لصالح شركة FCA US LLC.  
تعد FIAT علامة تجارية مسجلة لصالح شركة FCA Group Marketing S.p.A. يتم استخدامها بموجب ترخيص من شركة FCA US LLC.

